


## Fontana Steel Outdoor Pool Shower

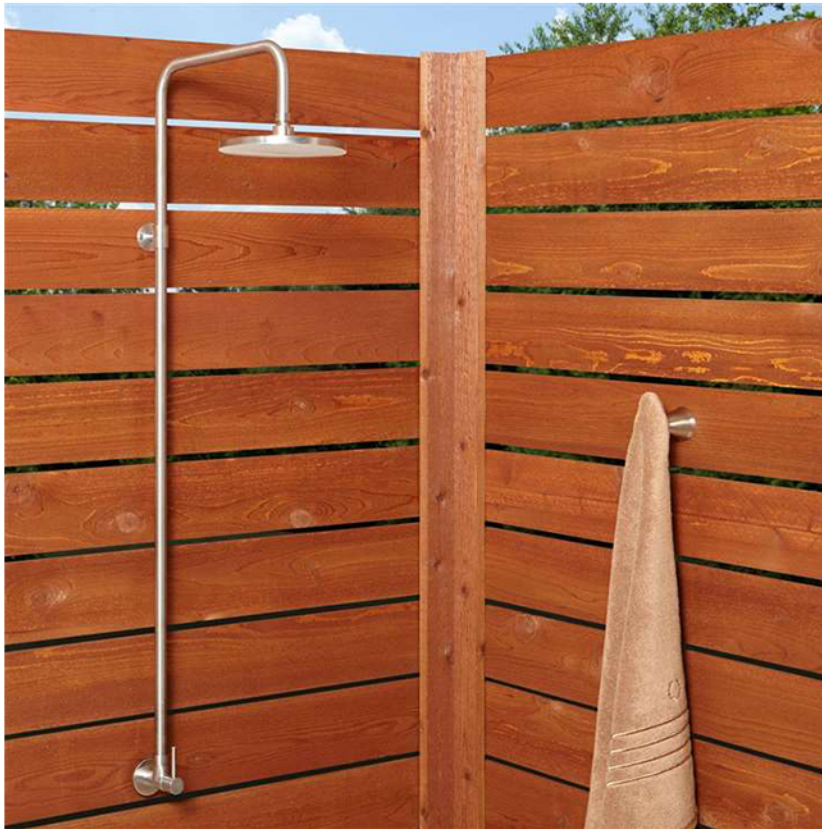

### PRIOR TO INSTALLATION

Please read installation instructions below. All plumbing should be installed in accordance with applicable building codes and regulations.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

All products must be installed by a professional and certified plumber otherwise warranty may be voided.

### POSSIBLE TOOLS REQUIRED\*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker



Screwdriver

\*not included


## Installation Instructions:

1. Loosen the set screw on the wall support loop with the Allen wrench provided. Slide the loop up the riser to the appropriate location and re-tighten the set screw to secure.
2. Thread the wall flange onto the wall support loop.
3. Place the decorative escutcheon on the handle valve and thread the valve directly onto the water supply line.
4. Slide the riser nut up the shower riser.
5. Insert the bottom of the riser into the handle valve. Slide the riser nut back down and tighten.
6. Mark the location of the mounting holes in the wall support flange and attach the shower to the mounting surface with the appropriate mounting hardware.
7. Attach the shower head.
8. Turn the water supply to check for leaks. Let the water flow through the shower head for approximately 30 seconds to clear out any debris or dirt.

## Winterizing:

1. Locate the shutoff valves for the outdoor shower unit. Turn off the shower's water supply.
2. Disconnect the supply lines from the back of the shower unit using the adjustable wrench.
3. Remove the shower head if possible.
4. Open the valve to the HOT position.
5. Insert the air blower from the air compressor into the HOT inlet hose. Blow compressed air into the hose until no more water comes out of the shower head.

NOTE: The hoses may differ from your installation.

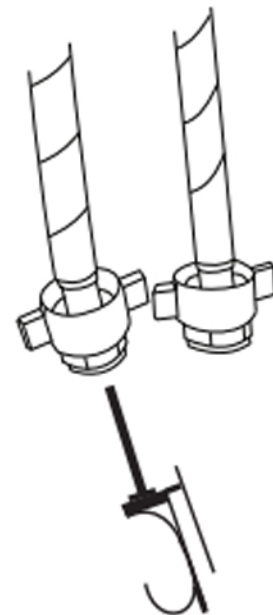

6. Open the valve to the COLD position.

7. Insert the air blower from the air compressor into the COLD inlet hose. Blow compressed air into the hose until no more water comes out of the shower head.

NOTE: The hoses may differ from your installation.

8. As a final check, place the temperature selector in the middle range.

9. Insert the air blower tool from the air compressor into the COLD inlet hose as shown in Step 5. Blow compressed air into the hose until no more water comes out of the shower head. Repeat for the HOT inlet hose.

When no more water comes out of the shower head, winterizing is complete.

10. Replace shower head if previously removed.

