

WALL MOUNT COMMERCIAL AUTOMATIC SOAP DISPENSER IN ANTIQUE BRASS FINISH




PRIOR TO INSTALLATION

Please read installation instructions below. All plumbing should be installed in accordance with applicable building codes and regulations.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

All products must be installed by a professional and certified plumber otherwise warranty may be voided.

POSSIBLE TOOLS REQUIRED*

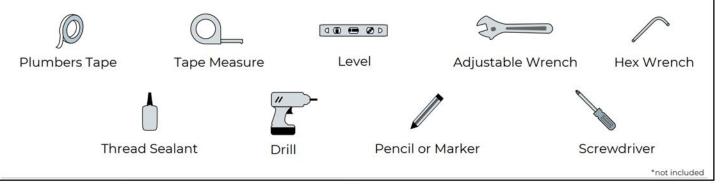



fontanashowers.com Customer Service: 800-684-448



Specification

Model Number: FST9924AB Feature: Foam Soap Dispenser Main Material: Brass With Chroming Dispenser Type: Automatic Dispenser


Type: Wall-Mounted Dispenser Working power: AC110-220V

Sensor distance: 2.4-3.9 inches (6-10cm)


Soap Capacity: 1500ML


Sensor lifetime: 300,000 times on/off Pump lifetime: 80,000 times on/off Ideal for commercial use applications in public restrooms, restaurants, office buildings, public facilities, and hospitals.


Fits all US Standard plumbing.

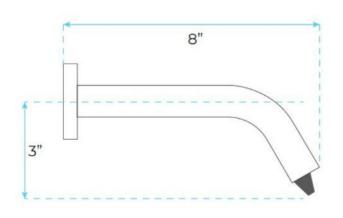

Deck Mount Installation

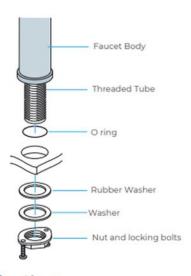

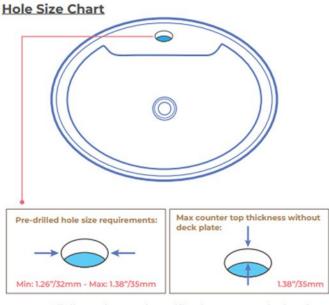

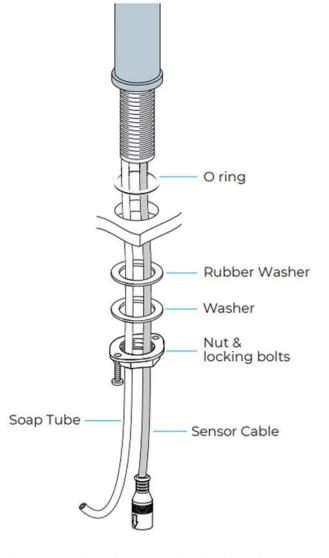


All dimensions and specifications are nominal and may vary. Use actual products for accuracy in critical situations.




FontanaShowers®


Installation Method

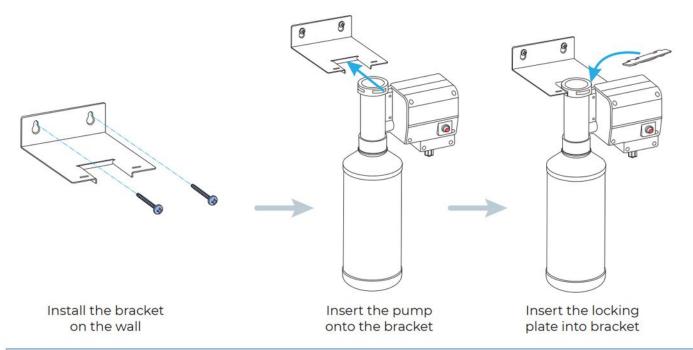

Soap Refill Process

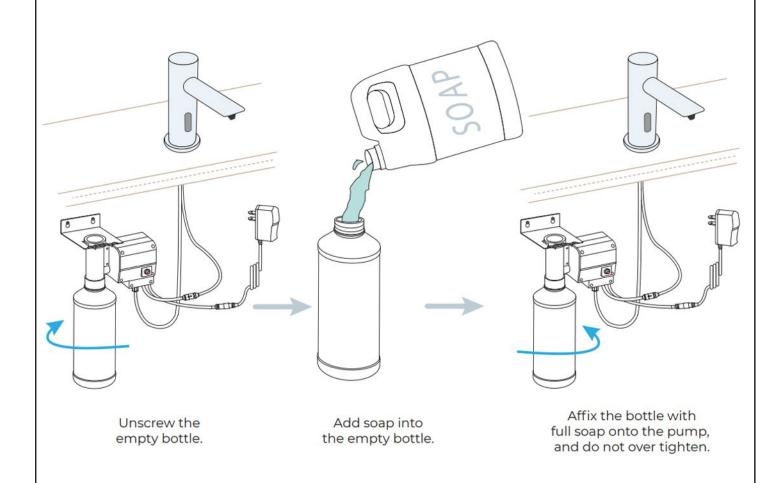


FontanaShowers®

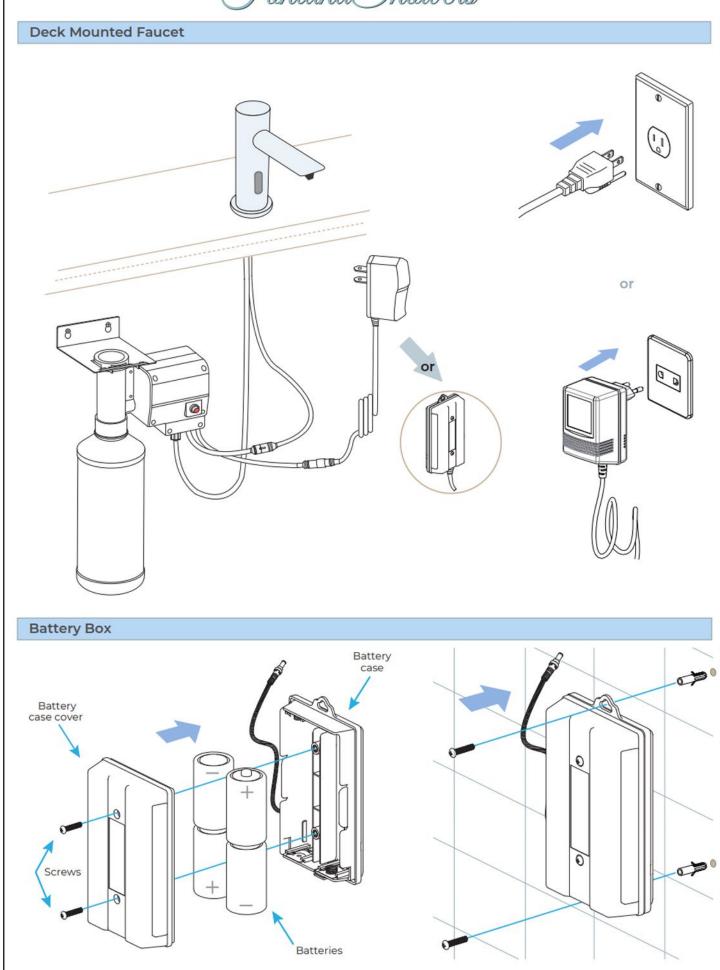









- 1. Remove cover of battery case.
- 2. Install four (4) D size alkaline batteries. Note: Make sure the batteries are installed in correct orientation (polarity).
- 3. Replace battery case cover.
- 4. Tighten screws.
- The standard life cycle time is 2 years, based on average use 2000 times/month.

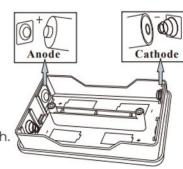

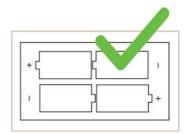


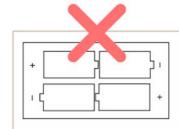








Usage

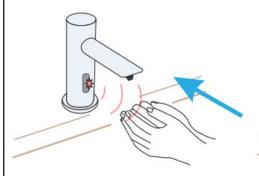



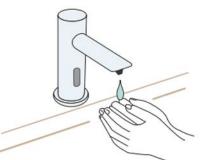



Predetermined amount of soap will dispense

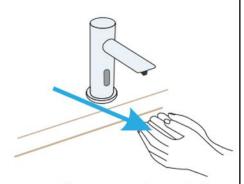

If more soap is needed, remove hands & repeat.

Usage of Button

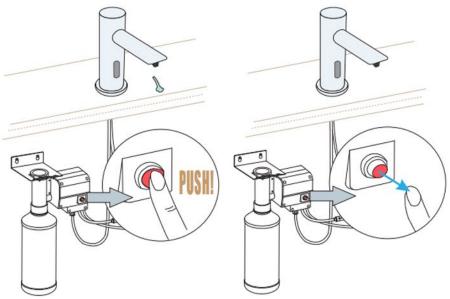





Do not use the sensor when the button is pressed, because they cannot be used at the same time, as it might lead to the damage to the machine.



Commissioning Sequence

Before using the soap dispenser for the first time the following sequence must be carried out.

Fill the bottle full of soap.

Locate the dispense button on the side of the pump. Press and hold the button until soap is dispensed from the spout. This will ensure the dispenser tube and cable are full of soap.

Operation

Place the hands under the spout within the sensing

Once the users' hands have been detected a small amount of soap will be dispensed from the spout into the users' hands.

General Information

Our sensor soap dispensers have a non-touch control which uses infrared sensing technology to detect human presence. Once detected, the spout instantly dispenses soap and automatically stops once the user moves their hands away to eliminate unnecessary wastage, whilst creating a more hygienic washroom solution.


All products manufactured and supplied by Fontana are safe and comply to legislative requirements. Providing they are installed correctly and receive regular maintenance in accordance with these instructions your user experience will not be affected

Sensor Faucet & Soap Dispneser Installation

Incorrect Installation








Installing electronic soap dispenser & faucet with intersecting centerline might lead to accidental activation of either or both.

Correct Installation



factory preset.

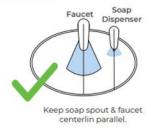

Care & Cleaning

- · Wipe away any debris adhering to the spout or
- · Wipe away debris with a damp cloth containing a suitable amount of a neutral, dishwashing detergent. Then wipe clean with a damp cloth.
- · When cleaning around the sensor, please be careful not to scratch the surface of the sensor window.
- · Do not use detergent that might damage the surface of spout. These include:
- · Detergents containing acid, chlorine bleach or alkali.
- · Detergents that are coarse granules in nature, such as polishing powder.
- · Solvents such as paint thinner or benzene.
- Abrasive aids such as nylon scrubbers/brushes, steel wool, etc.



Hygienic

The proximity sensor removes the need to touch the spout body, reducing the spread of germs and reducing the chance of cross infection.

